

BILL OF MATERIALS		
QTY	DESCRIPTION	XX9290
1	STAIRWAY LANDING COMP	XX9313
1	STAIRWAY LANDING KICK PL	XX9314
1	CORNER HANDRAIL ASSY	XX9321
1	OUTER COR HDRL ASSY	XX9322

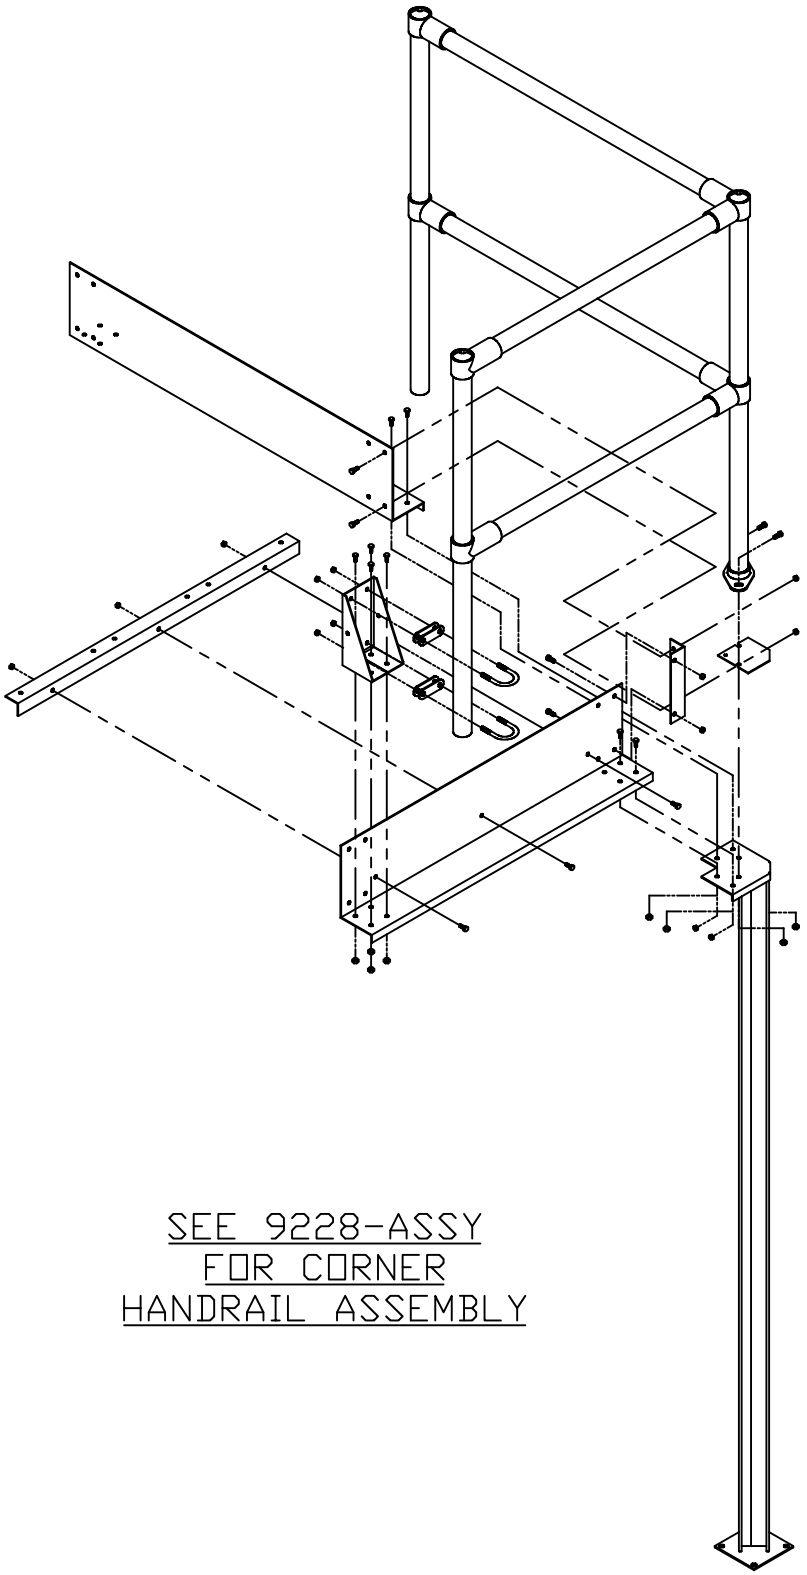

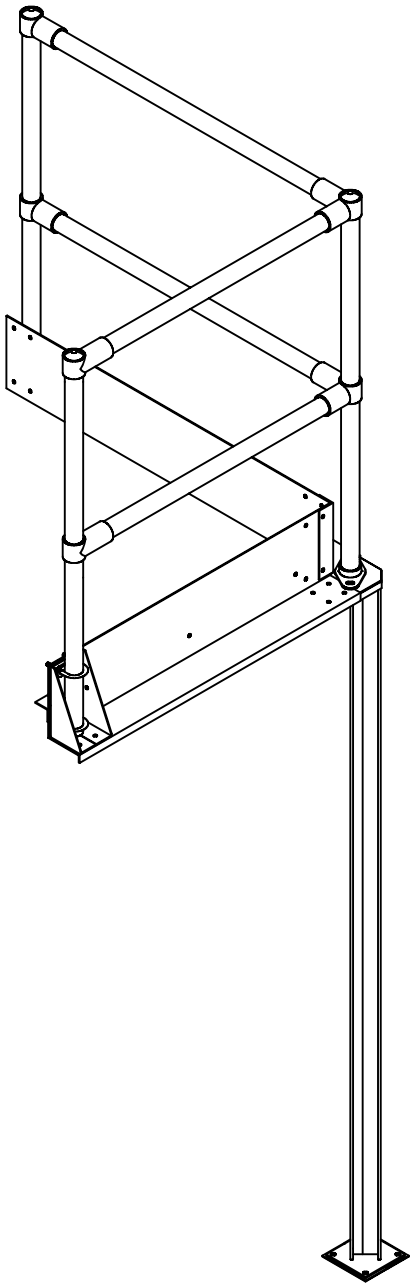

SEE 9228-ASSY
FOR CORNER
HANDRAIL ASSEMBLY


MISSING PARTS OR IN NEED
OF
ASSEMBLY ASSISTANCE?

Contact us direct for fast friendly service (800) 433-8488
Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681

ASSEMBLY INSTRUCTIONS
FOR 8000 SERIES TWO
LEVEL SHELVING

LYON WORKSPACE PRODUCTS
P.O. BOX 671
AURORA, IL 60507

9290
STAIR LANDING

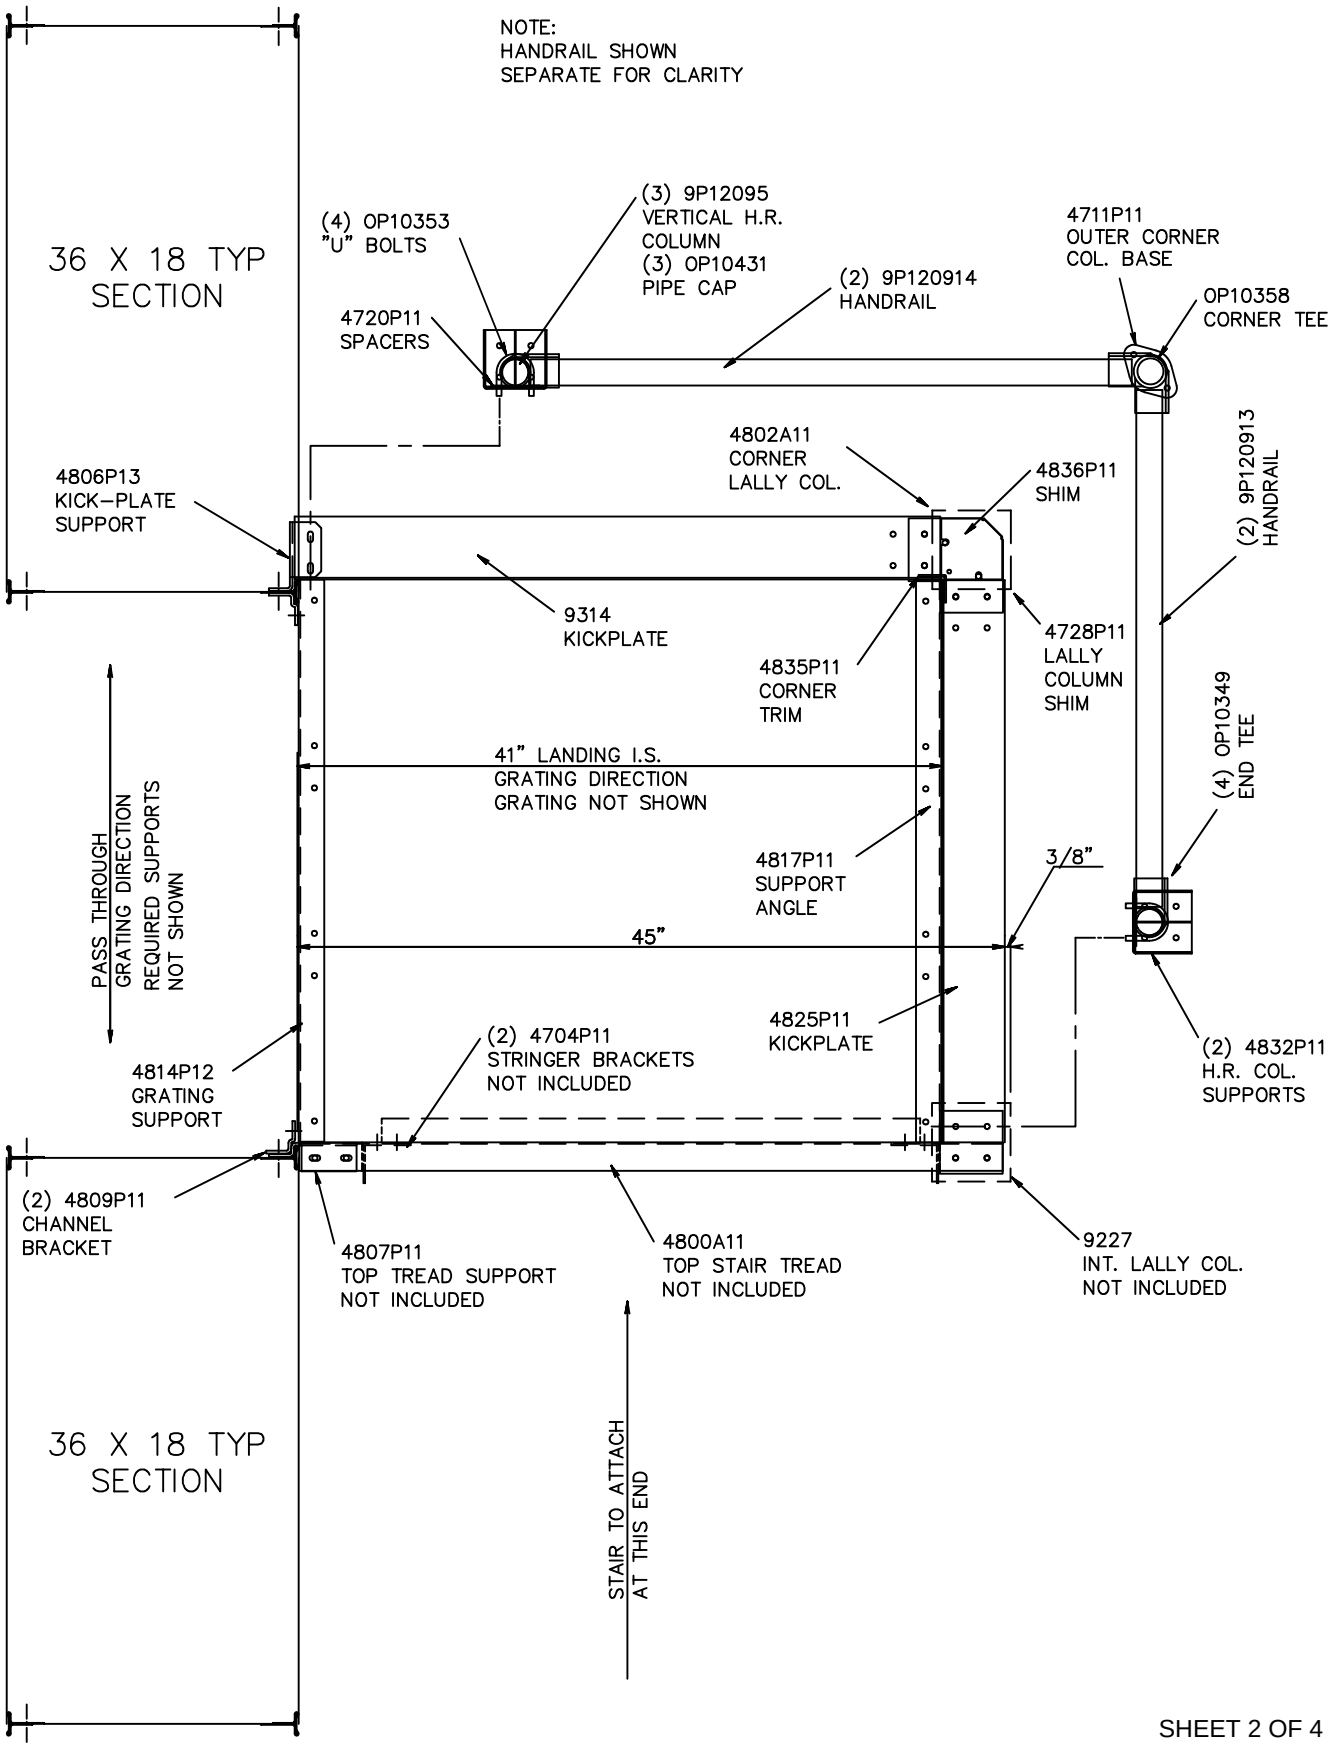


MISSING PARTS OR IN NEED
OF
ASSEMBLY ASSISTANCE?


Contact us direct for fast friendly service (800) 433-8488
Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681

ASSEMBLY INSTRUCTIONS
FOR 8000 SERIES TWO
LEVEL SHELVING

LYON WORKSPACE PRODUCTS
P.O. BOX 671
AURORA, IL 60507

9290 STAIR LANDING

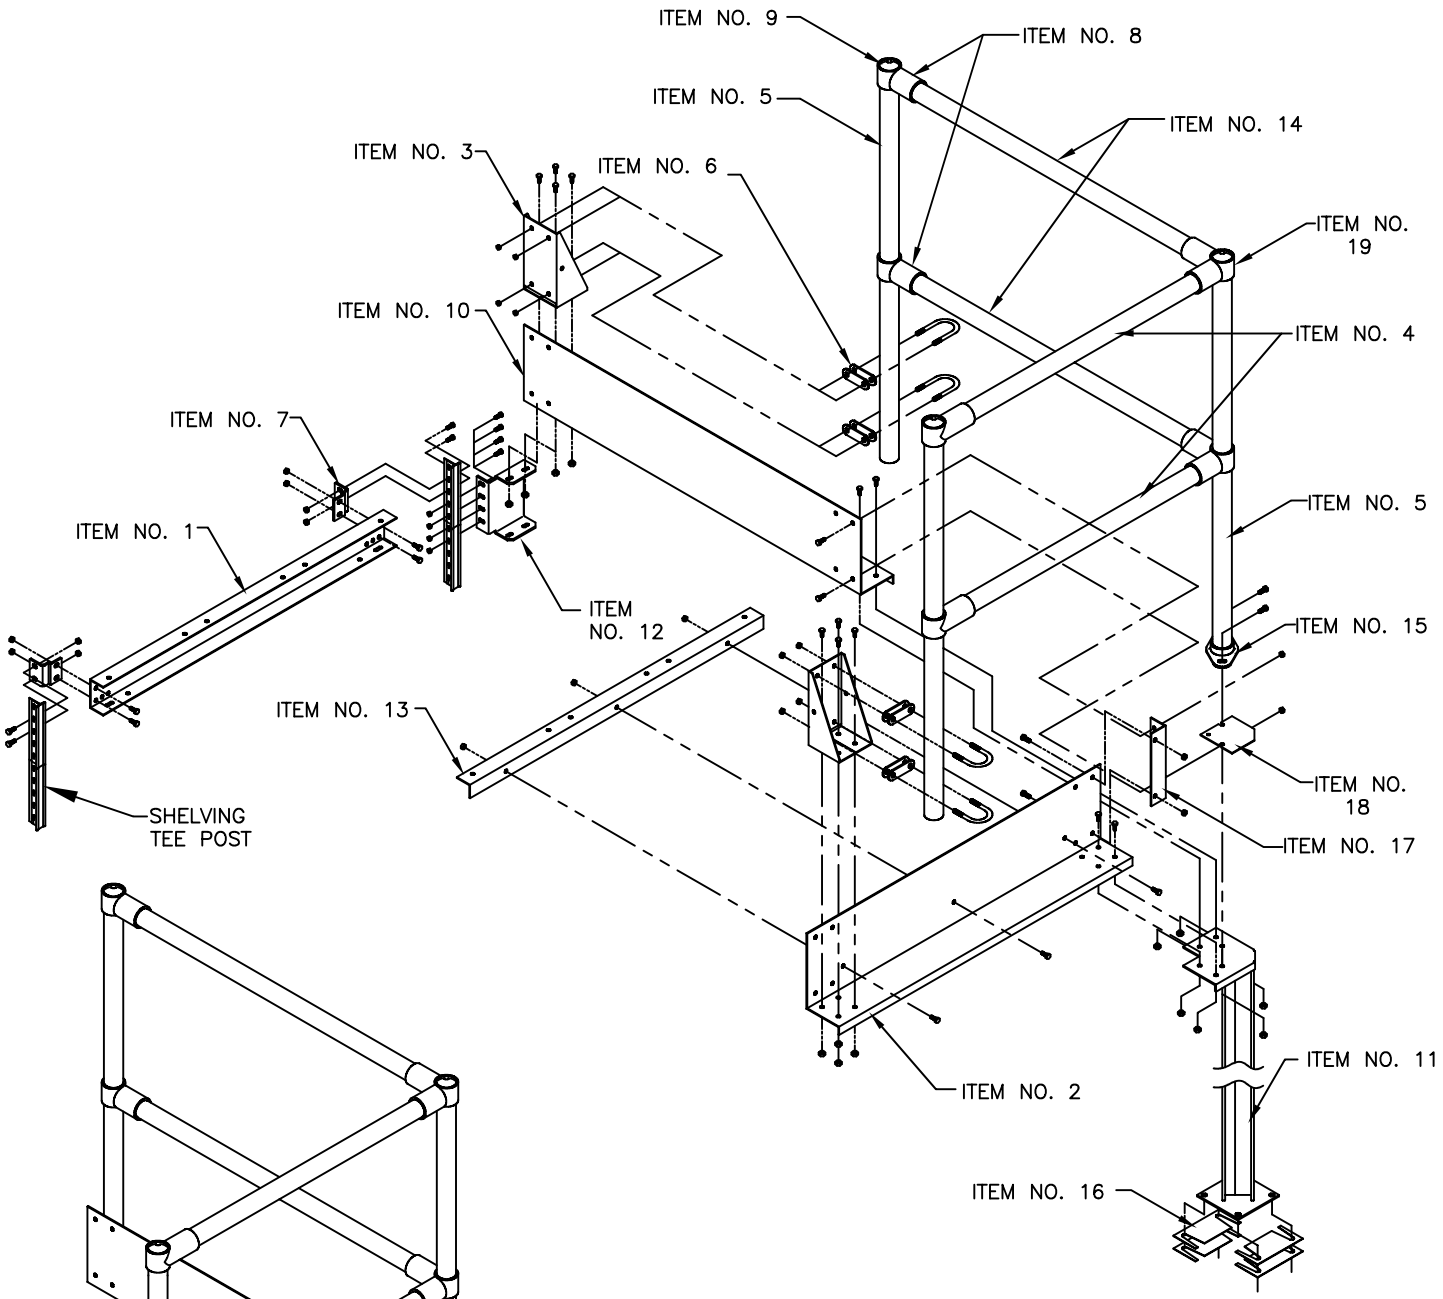

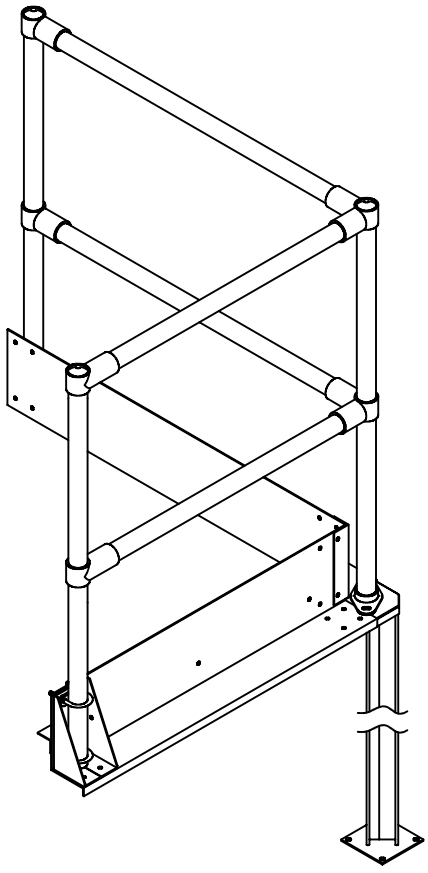

PARTIAL ASSEMBLED VIEW OF STAIRWAY LANDING

MISSING PARTS OR IN NEED
OF
ASSEMBLY ASSISTANCE?


Contact us direct for fast friendly service (800) 433-8488
Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681

ASSEMBLY INSTRUCTIONS FOR 8000 SERIES TWO LEVEL SHELVING

LYON WORKSPACE PRODUCTS
P.O. BOX 671
AURORA, IL 60507

9290 STAIR LANDING


HARDWARE



BOLT NO. 1
5/16"–18 X 3/4 HEX HEAD
CAP SCREW
QTY 32



NUT NO. 1
5/16"–18 WAFFLE
BACK HEX NUT
QTY 48

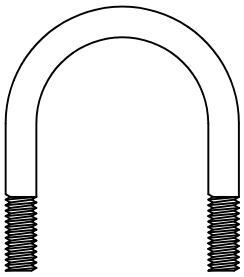

5/16–18 X 2 3/8" X
1 3/4" X 3/4" U BOLT
QTY 4

BILL OF MATERIALS			
ITEM	DESCRIPTION	9313	QTY
1	PERPENDICULAR GRATING SUPPT	4814P12	1
2	KICKPLATE 35 3/4"	4825P11	1
3	HANDRAIL COLUMN SUPPORT	4832P11	2
4	GALVARAIL PIPE 33 1/8"	9P120913	2
5	GALVARAIL PIPE 46 3/4"	9P12095	2
6	SPACER PLATE–ZINC PLATED	4720P11	8
7	CHANNEL BRACKET	4809P11	2
8	1 1/4" PIPE TEE 100	OP10349	4
9	PIPE CAP	OP10431	2
	5/16–18 X 2 3/8 "U" BOLT	OP10353	4
	BOLT NO. 1	OP10287	16
	NUT NO. 1	OP10285	24

NOTE:
PART NUMBERS ARE PROVIDED FOR REORDER OR CLAIMS ONLY.
PART NUMBERS ARE NOT IDENTIFIED OTHERWISE.

BILL OF MATERIALS			
ITEM	DESCRIPTION	9314	QTY
10	KICKPLATE 41 1/16"	4828P11	1

BILL OF MATERIALS			
ITEM	DESCRIPTION	9321	QTY
11	CORNER LALLY COLUMN ASSY	4802A11	1
12	KICKPLATE SUPPORT	4806P13	1
13	GRATING SUPPORT ANGLE	4817P11	1
14	GALVARAIL PIPE 38 1/2"	9P120914	2
5	GALVARAIL PIPE 46 3/4"	9P12095	1

BILL OF MATERIALS			
ITEM	DESCRIPTION	9322	QTY
15	OUTER CORNER COLUMN BASE	4711P11	1
16	LALLY COLUMN SHIM PLATE	4728P11	4
17	OUTER CORNER TRIM	4835P11	1
18	OUTER CORNER SHIM	4836P11	1
19	1 1/4" SIDE OUTLET TEE 115	OP10358	2
9	PIPE CAP	OP10431	1
	BOLT NO. 1	OP10287	18
	NUT NO. 1	OP10285	18

INSTRUCTIONS FOR 9290 STAIRWAY LANDING

1. ATTACH 35 3/4" LONG KICKPLATE, ITEM NO. 2, AND 41 1/16" LONG KICKPLATE, ITEM NO. 10, TO THE CORNER LALLY COLUMN, ITEM NO. 11.
2. ATTACH OUTER CORNER TRIM, ITEM NO. 17, TO KICKPLATES.
3. ATTACH 36" GRATING SUPPORT ANGLE, ITEM NO. 13, TO 35 3/4" KICKPLATE.
4. ATTACH THE OUTER CORNER COLUMN BASE, ITEM NO. 15, TO THE OUTER CORNER SHIM, ITEM NO. 18, THEN TO THE CORNER LALLY COLUMN ASSEMBLY.
5. INSERT A HANDRAIL COLUMN, ITEM NO. 5, INTO THE OUTER CORNER COLUMN BASE. PLUMB, SQUARE AND TIGHTEN SET–SCREW.
6. SLIP (2) SIDE OUTLET TEES, ITEM NO. 19, ON OUTER CORNER COLUMN. SQUARE TOP TEE WITH KICKPLATE AND TIGHTEN WITH TOP OF TEE FLUSH WITH TOP OF COLUMN. SQUARE BOTTOM TEE AND TIGHTEN MIDWAY BETWEEN TOP OF GRATING AND TOP OF CORNER COLUMN.
7. ATTACH (2) HANDRAIL COLUMN SUPPORTS, ITEM NO. 3, TO KICKPLATES.
8. ATTACH HANDRAIL COLUMNS, ITEM NO. 5, TO THE HANDRAIL COLUMN SUPPORTS. DO NOT TIGHTEN.
9. SLIP (2) HANDRAILS, ITEM NO. 4, INTO TEES ON CORNER COLUMN. SLIP (2) TEES, ITEM NO. 8, ON HANDRAIL COLUMN ON 35 3/4" KICKPLATE. SLIP HANDRAILS INTO TEES. SQUARE, LEVEL, PLUMB AND TIGHTEN THE COLUMN AND TEES.
10. SLIP (2) HANDRAILS, ITEM NO. 14, INTO TEES ON CORNER COLUMN. SLIP (2) TEES, ITEM NO. 8, ON HANDRAIL COLUMN ON 41 1/16" KICKPLATE. SLIP HANDRAILS INTO TEES. SQUARE, LEVEL, PLUMB AND TIGHTEN THE COLUMN AND TEES.
11. INSTALL PIPE CAPS IN HANDRAIL COLUMNS.
12. ATTACH KICKPLATE SUPPORT, ITEM NO. 12, TO SHELVING.
13. STAND UNIT UP. ATTACH THE LANDING TO THE KICKPLATE SUPPORT. PLUMB AND LEVEL THE CORNER LALLY COLUMN USING SHIMS, ITEM NO. 16.
14. ANCHOR THE COLUMN TO THE FLOOR. (ERECTOR TO FURNISH ANCHORS)
15. ATTACH CHANNEL BRACKETS, ITEM NO. 7, TO SHELVING. THEN ATTACH PERPENDICULAR GRATING SUPPORT, ITEM NO. 1, TO THE CHANNEL BRACKETS.

MISSING PARTS OR IN NEED
OF
ASSEMBLY ASSISTANCE?

Contact us direct for fast friendly service (800) 433-8488
Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681

ASSEMBLY INSTRUCTIONS
FOR 8000 SERIES TWO
LEVEL SHELVING

LYON WORKSPACE PRODUCTS
P.O. BOX 671
AURORA, IL 60507

9290
STAIR LANDING